



Bianca Twin Shower

Nero

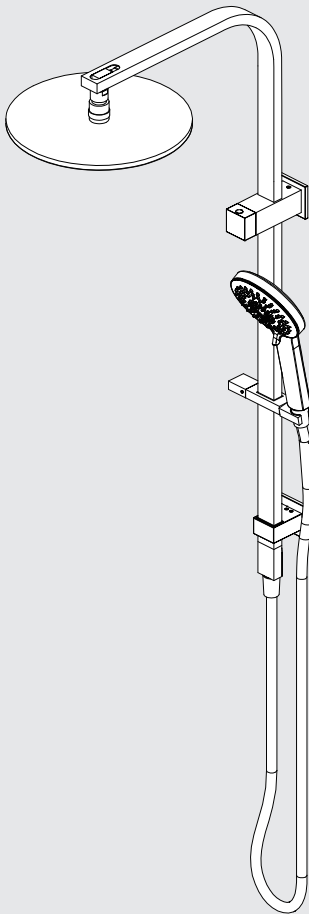

Versions:202506

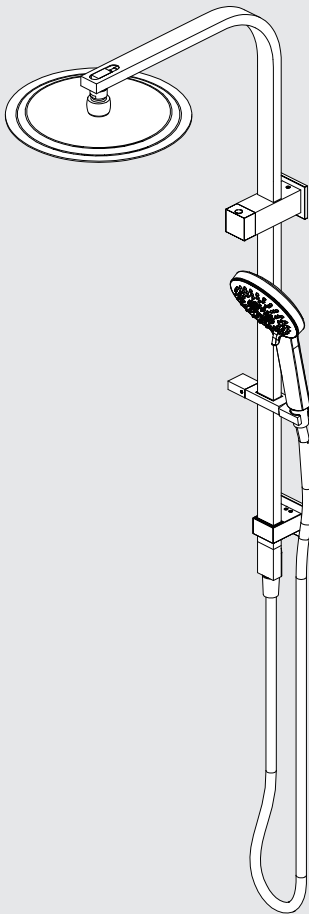

Drawing

Specifications

Watermark License
WM-060093

Temperature Rating
Min 1°C-Max 75°C

Pressure Rating
Min 150kpa - Max 500kpa

Finish & SKU

Chrome
NR250805fCH

Packaging Includes

1x Shower Arm
1x Shower Rail
1x Shower Head
1x Hand Shower (Built- In Check Valve)
1x 1.5m PVC Hose
1x Installation Kits

*Dimensions are nominal measurements only.
**Dual-check valve pre-installed.

Drawing

Specifications

Watermark License
WM-060093

Temperature Rating
Min 1°C-Max 75°C

Pressure Rating
Min 150kpa - Max 500kpa

Finish & SKU

Gun Metal NR250805fGM Brushed Nickel NR250805fBN Brushed Bronze NR250805fBZ
Matte Black NR250805fMB Brushed Gold NR250805fBG

Packaging Includes


1x Shower Arm
1x Shower Rail
1x Shower Head
1x Hand Shower (Built- In Check Valve)
1x 1.5m PVC Hose
1x Installation Kits

*Dimensions are nominal measurements only.
**Dual-check valve pre-installed.

Installation Instruction

GENERAL INSTRUCTIONS:




- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the shower. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the shower components.
- Ensure that all outlets used for personal hygiene deliver water at a safe temperature in accordance with regional regulations.
- Verify that the water pressure is within the recommended range for the shower to function properly.

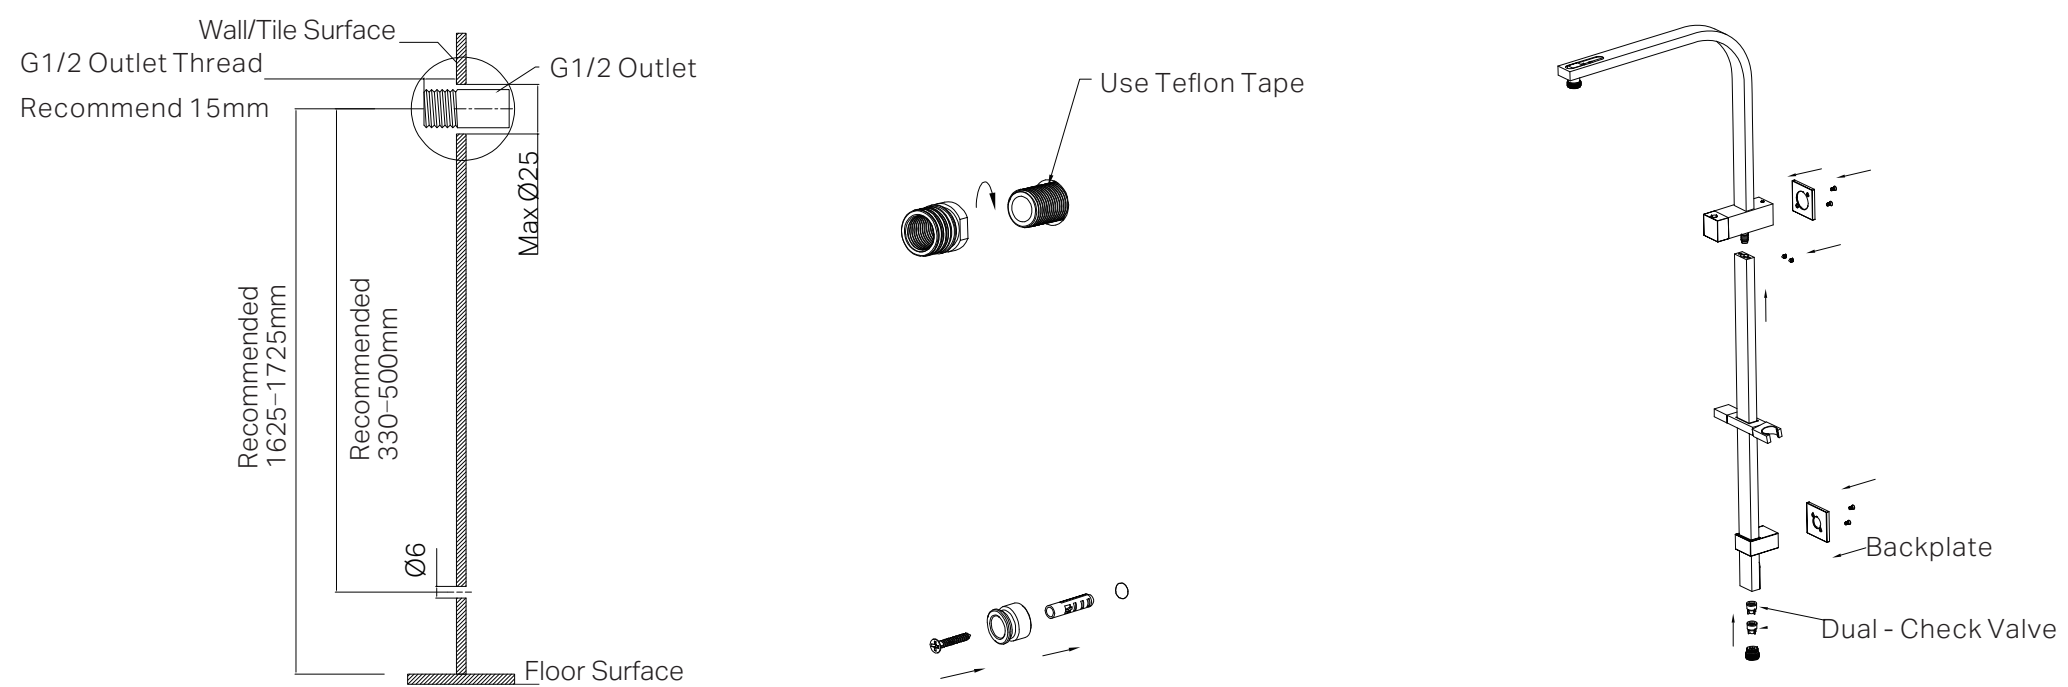

1. Ensure the G1/2 outlet thread extends 15mm beyond the finished wall or tile surface, trim the thread if necessary to achieve this length.
The recommended height for the water inlet is 1625-1725mm from the finished floor surface.
Drill a 6mm hole in the wall, 330-500mm below the center point of the inlet point, as shown in the diagram.

2. Apply the G1/2 water outlet connection with Teflon tape to ensure a watertight seal.
Screw the adapter onto the outlet.
Insert expansion screws into the 6mm hole, and secure the fixing bracket to the wall with self-tapping screws.

3. Insert shower arm into shower rail, and secure by grub screw.
Slide the two backplates onto shower arm and lower mounting pillar.
Note: Dual-check valve are pre-installed in the shower rail.

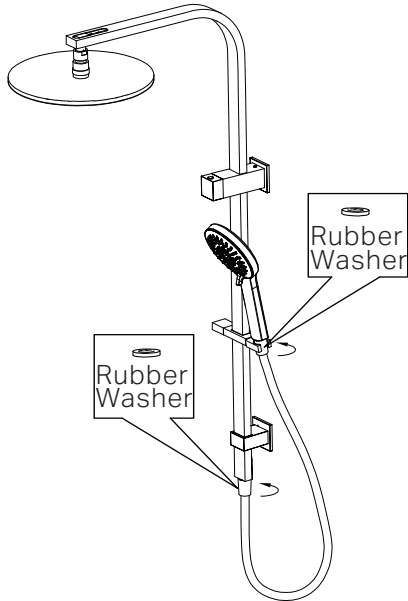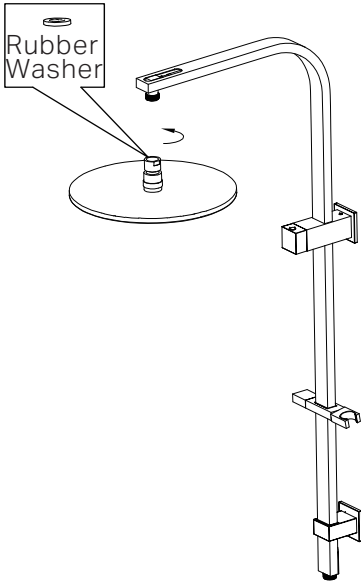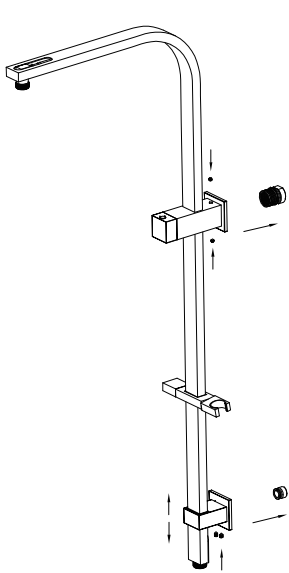

4. Position the shower rail assembly over the wall adaptors.
Tighten grub screws firmly with Allen key provided.
Slide the two backplates against the wall/tile surface properly.

5. Screw the overhead shower into the shower arm, ensuring a rubber washer is in place for watertight seal.

6. Attach the hand shower to the hose and connect the hose to the shower rail, ensuring that rubber washers are in place at both connection points to prevent leaks.
Confirm that all connections are securely tightened, then activate the drainage system and turn on the water supply.
Inspect all connections for any signs of leakage.

MAINTENANCE AND CARE:

- Regularly check the shower system and all connections for signs of wear or leaks.
- Clean all shower components with mild soapy water to maintain their appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.
- Descale the showerhead, hand shower, and other components periodically to prevent mineral buildup, which can affect water flow and performance.
- Inspect and replace any worn-out parts, such as seals or washers, to ensure the longevity and efficiency of the shower system.
- Ensure all moving parts, such as adjustable brackets or sliding rails, are functioning smoothly and are properly lubricated if necessary.

FINAL INSPECTION:

- Ensure the shower operates smoothly and that there are no leaks at the connections.
- Verify that the water temperature and flow are consistent and as desired.
- Clean the area and the newly installed shower with a soft cloth to remove any installation residues.